

**4K**

**86"**  
CLASS

 
**QUICK  
START  
GUIDE**

 **element • Roku TV**

# WHAT'S INCLUDED





## Remote

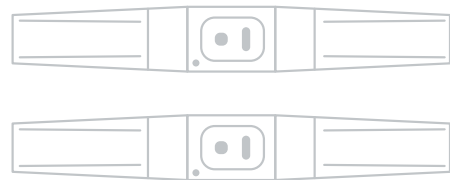

**TV Stand**
  
## 8 Stand Screws

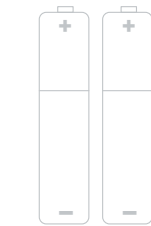

**2 AAA  
Remote  
Batteries**

# WHAT YOU'LL NEED (NOT INCLUDED)



**Screwdriver  
Phillips head**



**Wireless Router  
Needed for streaming**



**Internet connection  
Needed for streaming**



**Smartphone, computer or tablet  
Needed for setup**

# CONNECT DEVICES TO YOUR TV

Check to ensure that you have selected the right cables for the ports and that they are connected securely (*cables and external devices not included*). Loose connections can affect your picture and audio quality.

## ANT/CABLE



Connect an outdoor or indoor antenna.

## HDMI



 
Connect a Blu-ray or DVD player, gaming console, or other external devices to your TV. Highest quality audio/visual connection.

## OPTICAL



Connect an optical cable from an external digital audio system.

## HEADPHONE

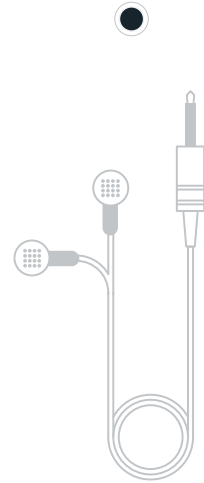


Connect headphones or external speakers.

## LAN



 Connect an Ethernet cable to access a network or the Internet. The TV also has a wireless connectivity feature.

## USB

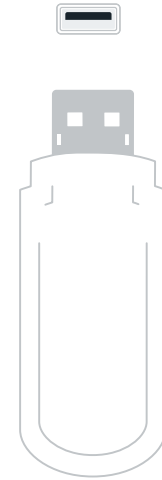

Connect a USB device for browsing photos, music, movies, or pausing live TV.

## VIDEO IN



Connect a composite video cable and left-right audio cables from an external AV device.

## L



 
## R



# CONNECT DEVICES TO YOUR TV

(continued)

# SETTING UP YOUR TV

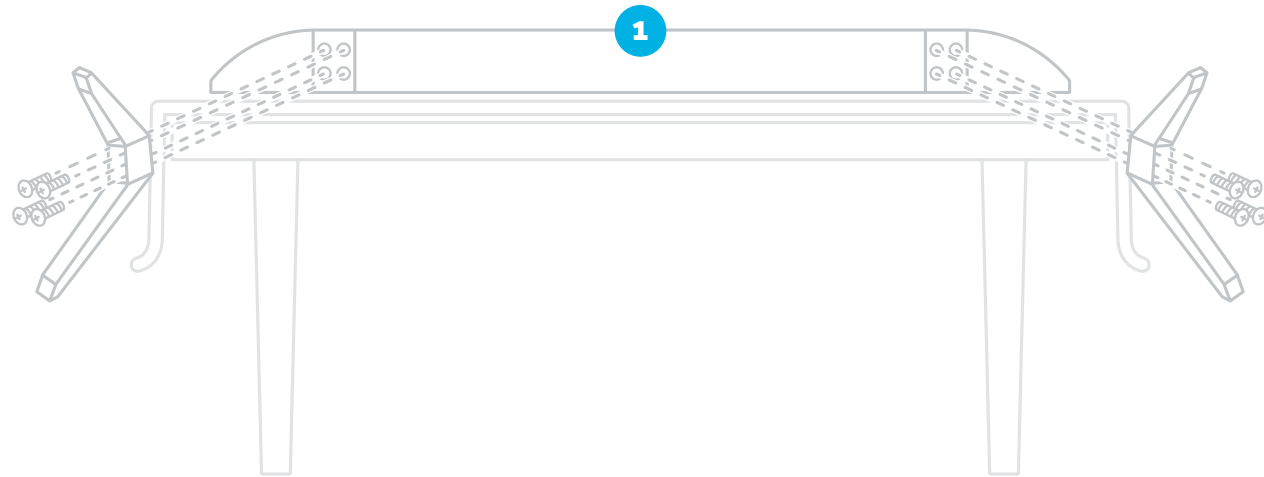

## Installing the stands

**⚠ WARNING:** Your TV is heavy (>96 lbs)! A minimum of two people are required for installation. Do not install the stands if you want to wall mount your TV.

**You will need:** Phillips screwdriver (not included)

 
1. Place the TV screen-down on a clean, flat, soft surface (e.g.: blanket) to prevent scratches or damage to the screen.
2. Use a Phillips screwdriver to attach each stand with the provided screws.
3. Use the handles on the back of the TV to help lift and place it upright on a stable, level surface.

**To avoid damages, never carry your TV by holding or putting pressure onto the glass.**

**Use the attached handles when lifting and take extra care when handling.**

# SETTING UP YOUR TV

(continued)

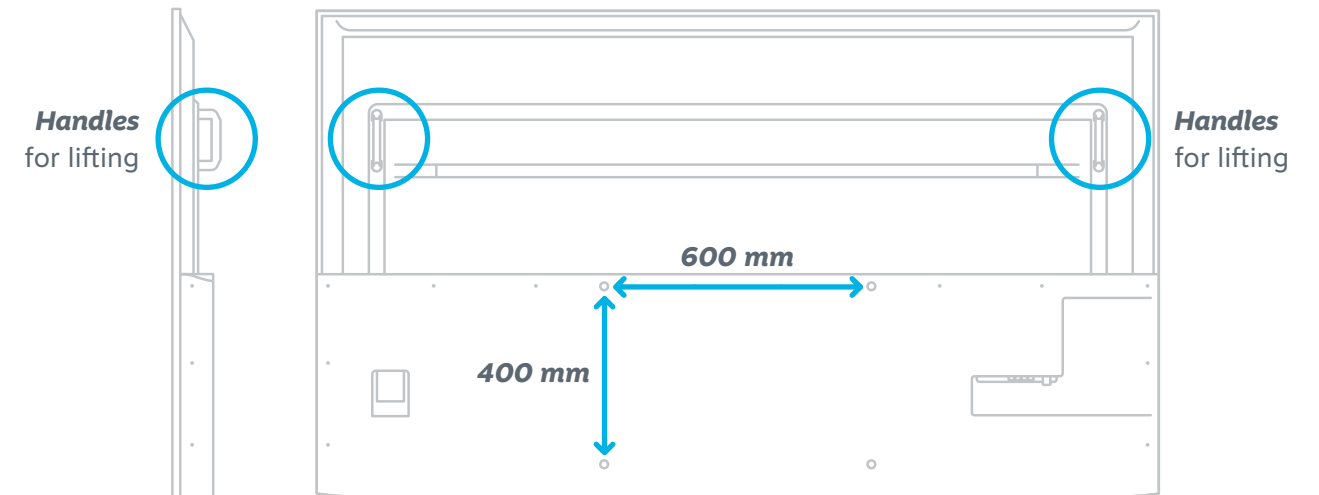

## Mounting your TV

**If you choose to wall mount your TV, please ensure your wall mount (not included) and supporting structure can hold >96 lbs and is properly anchored.**

Your TV has four mounting holes for a 600 x 400 mm VESA approved mounting bracket.

1. Place the TV screen-down on a clean, flat, soft surface (e.g.: blanket) to prevent scratches or damage to the screen.
2. Mount the VESA bracket using four M8 x 28 mm (max depth) screws (not included) and follow the mounting instructions provided with your wall mount.

**If you have any doubts about your ability to safely install your TV, please consult a professional installer.**

# SETTING UP YOUR TV

(continued)

2

 
## Place Batteries in Remote

Power your TV remote by inserting the included batteries carefully matching (+) and (-) indicated inside the battery compartment.

**TIP:** Always replace dead batteries with two brand-new batteries from the same manufacturer. Never use damaged batteries.

If your remote gets warm/hot during use, discontinue use and contact customer support immediately.

3

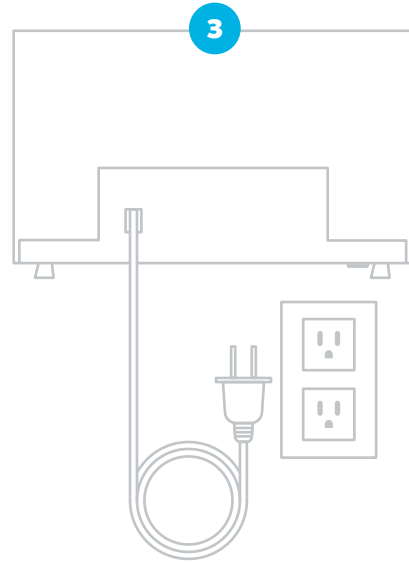

## Plug in and turn on TV

Plug your TV into the wall outlet and press the power button on your remote control.

 
## Power button



# SETTING UP YOUR TV

(continued)

4

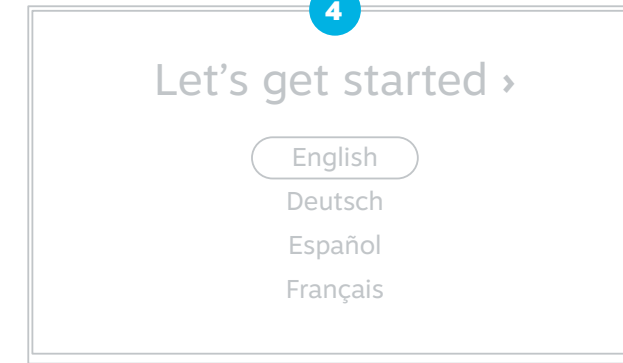

## Follow the on-screen instructions

When your TV powers on, follow the easy on-screen instructions for setup.

Your TV will automatically detect wireless networks in your area, so have your network name and password handy. If you aren't ready to connect to a wireless network you can still use it as a regular TV.

5



## Activate your smart TV

Activate your TV using your computer, smartphone, or tablet to link to a Roku account. You need a Roku account to activate your TV and access entertainment across thousands of streaming channels.

**NOTE: ROKU DOESN'T CHARGE FOR ACTIVATION SUPPORT - BEWARE OF SCAMS.**

 
Roku accounts are free and while a valid credit card number is not required to create a Roku account, saving your credit card information makes renting and purchasing entertainment from the Roku Channel Store fast and convenient.

Once connected to your account, your TV will automatically update with the latest software, and you can start streaming immediately.


A paid subscription or other payments may be required for some streaming channels. Channel availability subject to change and varies by country.

# USING YOUR REMOTE

The Roku TV remote should feel right at home in your hand. We designed it to be incredibly intuitive for watching TV and navigating on-screen menus.

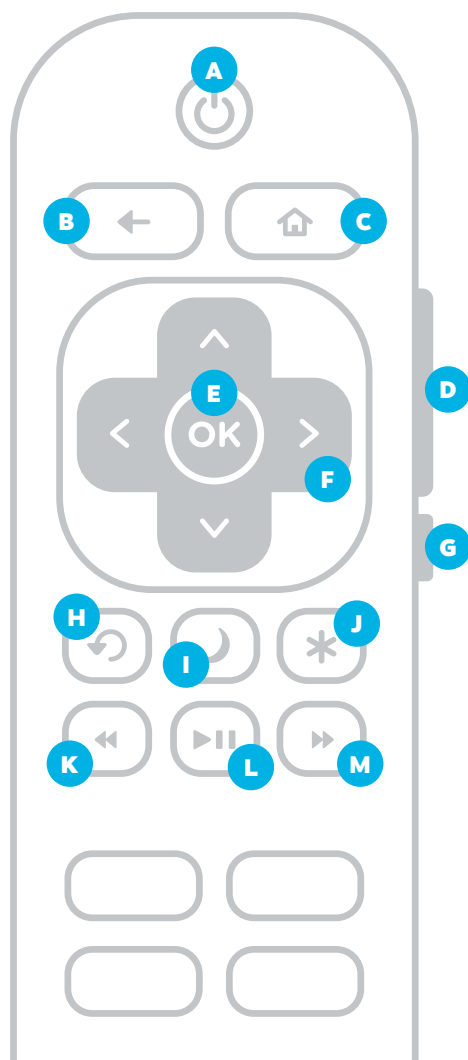

- A Power** Turn TV on and off
- B Back** Return to previous screen
- C Home** Return to Roku Home screen
- D Volume** Raise and lower volume
- E OK** Select an option from a menu
- F Navigate** Move up, down, left or right
- G Mute** Mute and restore sound
- H Instant Replay** Replay the last few seconds of streaming video
- I Sleep** Set the sleep timer
- J Options** Access to picture settings, more streaming channel icons and more
- K RWD** Rewind streaming video, scroll left one page at a time
- L Play/Pause** Start or pause playback
- M FWD** Fast forward streaming video, scroll right one page at a time


**TIP:** The  button gives you easy access to picture settings, display options and more. Try it on every screen.

*Actual remote includes pre-set channel buttons with channel logos.*

# CONNECTING AN ANTENNA

 With the built-in tuner you can connect your TV to an antenna and enjoy over-the-air entertainment.

- 1.** When the setup wizard is complete select the Antenna/Live TV icon from the home screen.
- 2.** Follow the on-screen instructions.
- 3.** Whenever you want to watch antenna TV, select the Antenna/Live TV icon.
- 4.** Live TV Pause feature: Pause up to 90 minutes of live antenna TV when you connect a 16 GB or larger USB drive to your TV. All data on the USB drive will be deleted prior to use.

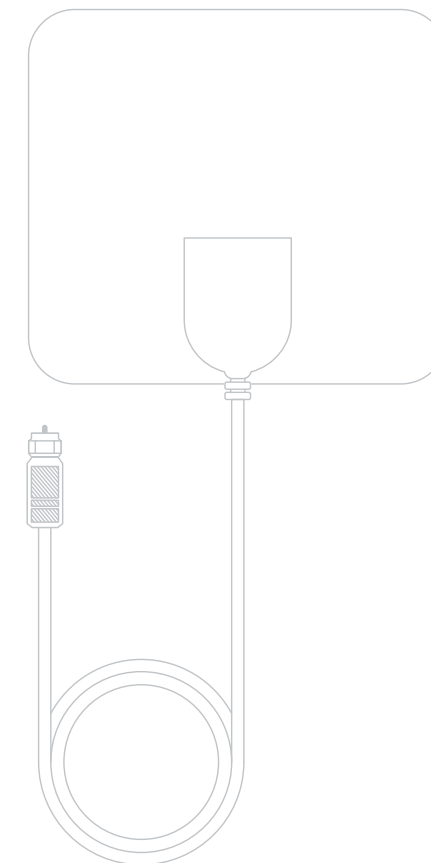

# UNIVERSAL REMOTE SETUP

If you prefer to use your cable set-top box or satellite receiver remote as a universal remote, please refer to the manual your cable or satellite service provided. It includes instructions on how to program your remote to your TV.

You can find the most common cable and satellite provider universal remote codes at [roku.com/universalremote](http://roku.com/universalremote).

# LET'S REGISTER YOUR PRODUCT



It's super easy, just head on over to [elementelectronics.com/register](https://elementelectronics.com/register)

## BENEFITS OF REGISTERING YOUR PRODUCT:



### Support

Get assistance quickly by pre-registering your product.



### News & Offers

Take advantage of the latest news and special offers from Element.



### Updates

Stay current with important product updates and notifications.



### Warranty

Receive a 2 year warranty with product registration\*

\*1 year manufacturer warranty with purchase or 2 year warranty with product registration within 90 days of purchase.

# WE'RE HERE TO HELP

Find resources and get help with product setup, connecting devices, technical issues, downloading manuals and more!

**We're available 24 hours a day, 7 days a week**



**[elementelectronics.com](https://elementelectronics.com)**



**1.888.842.3577**



**[customerservice@elementelectronics.com](mailto:customerservice@elementelectronics.com)**

To download the full Roku TV User Manual, and review the latest information on common issues and solutions, visit [go.roku.com/roktv](https://go.roku.com/roktv)

We recommend keeping your TV box for the duration of your warranty. See your product warranty for details.







*Element, the Element Logo, and Bring it home are trademarks of Element Brand Holding, LLC. ©2022, Element Brand Holding, LLC, All Rights Reserved.  
Roku, Roku TV, the Roku logo, and the purple d-pad design are trademarks of Roku, Inc.  
All other trademarks are the property of the respective owner who has not sponsored, endorsed, or approved this product.*